 


Classroom Tech Quick Reference



All functions controlled by touch screen - touch anywhere to begin.

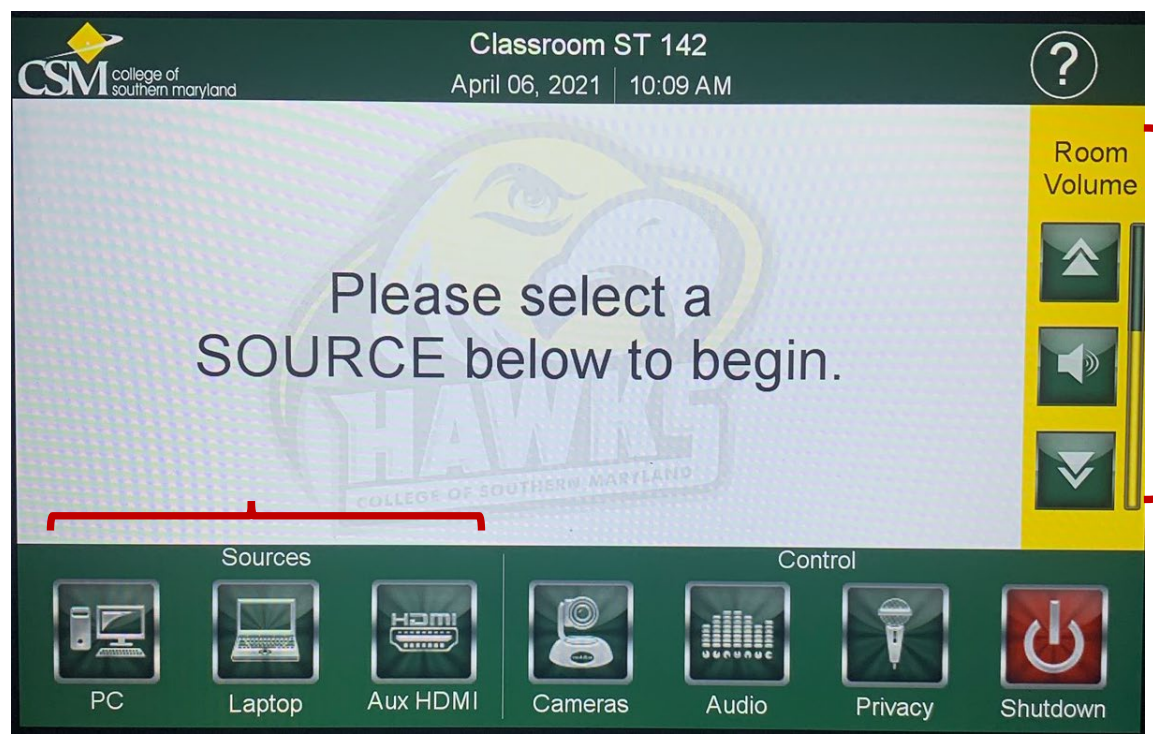

Need assistance? Call the Help Desk ext. 4357



Hy-Flex Classrooms web page

Sources

Touch desired source to be projected. The display screen will come down, and projector will turn on. Controller screen will confirm source, then follow any directions displayed. Be sure selected source is powered on.

PC – Podium computer. *PC has been selected.*

Laptop – Optional laptop. Plug device into the supplied HDMI cable on top of the podium. *Laptop has been selected.*


Aux HDMI – Alternate device (like a document camera, another laptop, etc.). Plug device into the supplied HDMI cable (on top of podium, or in drawer). *Aux HDMI has been selected.*

Room Volume


Control output volume of any source device (Increase, Mute, Decrease). Speakers installed in ceiling.

Controls

Touch desired control.

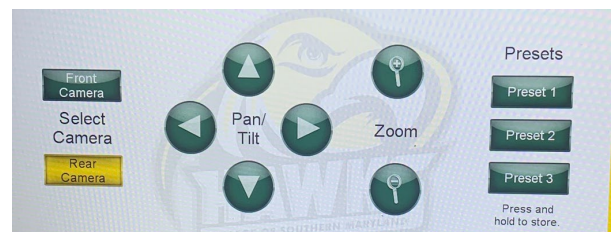

Cameras – Room equipped with two; select Front or Rear. Then Zoom, Pan or Tilt to achieve desired view.

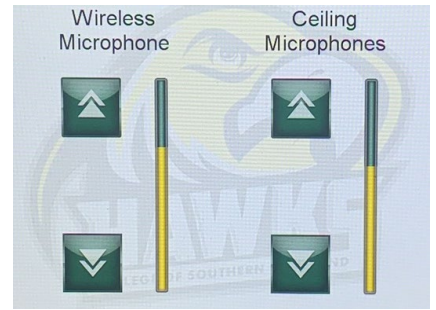

Audio – Adjust microphone volume. Room equipped with ceiling mics. If wireless is needed, send request to the Help Desk.

Privacy – Mute room mics; remote attendees will not hear room activity. Ceiling mic light turns red. Touch again to unmute.

Shutdown – Powers off the projector, display screen will go up.